 


Tumble Dryer **OWNER'S MANUAL**

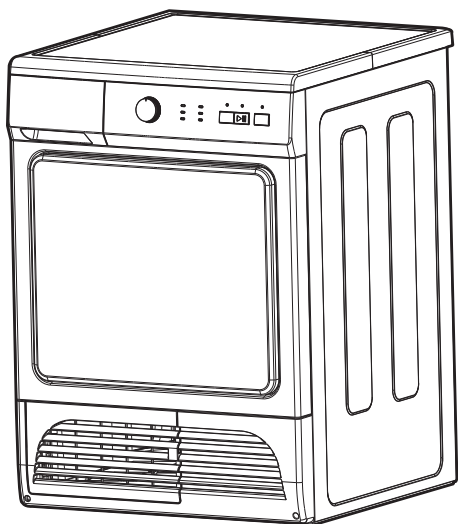

Applicable Models
DWRCB8011

Thank you for choosing out dryers.

Please read this OWNER'S MANUAL carefully prior to using,
and keep it for further reference.

PREFACE

Thank you for choosing our dryers. Please read this manual carefully. It provides instruction, use, and maintenance. Retain it for future reference. Record the model and serial numbers of your machine. Quote this information to your dealer if you require service.

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips



Environmental information

Contents

Safety information	1
Product description	5
Control panel.....	6
Use	7
Drying hints	11
Drying programme.....	13
Care and cleaning	14
Something not working.....	17
Technical data	18
Installation.....	19
Environment concerns.....	21
Guarantee/Customer Service.....	22
Electric diagram	24

Safety Information

Before Use



WARNING

Read and understand thoroughly this safety instructions before use. The items indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.

 
The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.




Possible electric shocks

- Disassembly, repairation or modification cannot be carried out by people other than professional maintenance staffs.
- The household electrical supply system (the current, the voltage, the cable) such as a fuse with suitable specifications should be provided, should meet requirements of the dryer under normal load, and safety devices.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not disconnect the power plug by pulling the supply cord, Hold the power plug with your hand, Whilst being careful not to touch the plug pins.
- Do not use the supply cord when connection of the power plug and the supply cord is loose.
- Do not touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Do not over-bend the supply cord or put it under heavy weight.
- Do not use the supply cord / socket / power plug if it is damaged or broken.

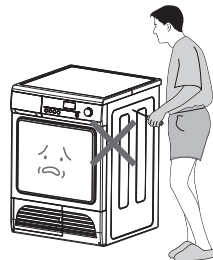

Possible Explosions

 - Do not put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Do not connect / disconnect the power plug when leakage of gas or other combustible gas occurs.

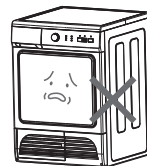


Safety Information

Before Use

Fire accidents / short circuit or electric leakage may occur

 - Do not install the appliance close to fire sources or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in places with dampness or suffering from rainfalls, lest igniting damages or other accidents occurs easily due to gathered water drops on electrical components.
- Do not install the dryer in places under direct sunshine, lest the plastic components and rubber components become aged.
- Do not pour water on the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover, you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance.

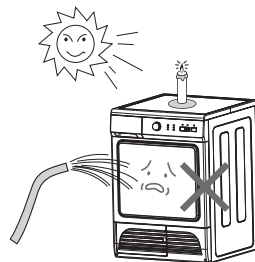


Warning

Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Personal injury may occur

 - This machine is not intended for use by young children or infirm persons without supervision.
- The packaging materials may be dangerous to children. Put all packaging materials (e.g. the plastic bag) out of reach of children.
- Do not touch laundry in the drying drum till the dryer stops working completely.
- Do not keep children or pets nearby when the dryer is working, for they may be trapped into the dryer. Please check carefully the drum before closing the door.

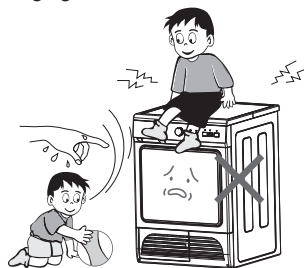


Other instructions

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occur.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam runner (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint must not be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners of similar products should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

- The lint trap has to be cleaned frequently.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, tacking or storing oil affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Product description

 Before Use

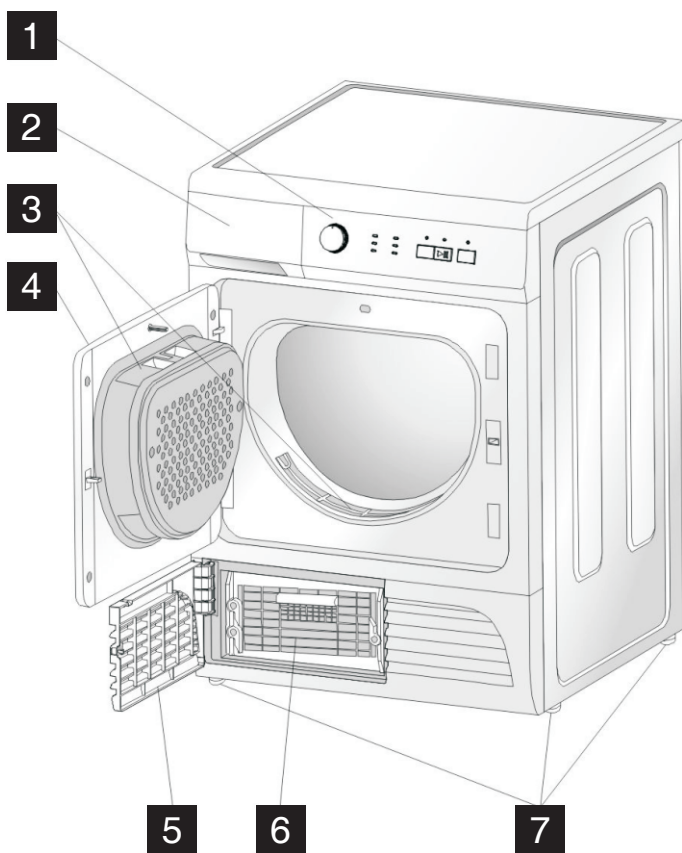

1. Control Panel

4. Door

7. Adjustment leg

2. Drainage container

5. Condenser cover

 
3. Fluff filter

6. Condenser

Control panel

Use Process

Control panel

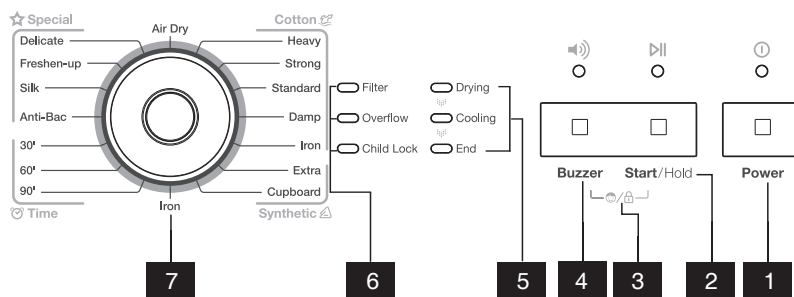

1. Power
2. Start / Hold
3. Child Lock
4. Buzzer
5. Individual lights -Drying
 - Cooling
 - End
6. Individual lights - Fliter
 - Overflow
 - Child Lock
7. Program Selector Dial

Use

Use Process

 
First Use

- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

Daily Use



Connect the appliance

- Open the door (see picture), by pressing as shown.
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check the laundry does not get caught between the door and filter

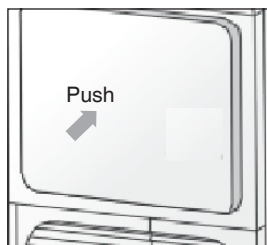

Select the required programme

  - Turn the programme selector dial to the required programme. The Start/Hold light starts to flash. The programme will be switched off if you have not pressed any button for 10 minutes.

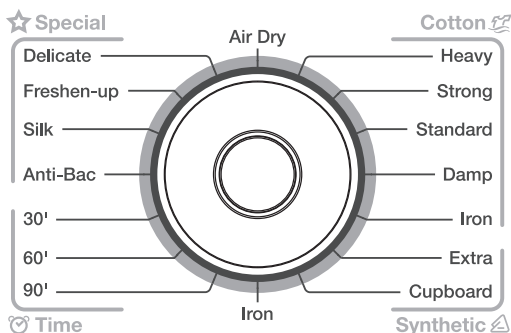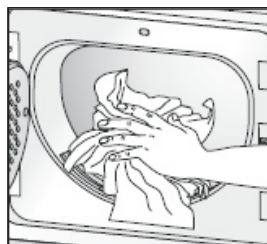

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Time
- Special

Note:

The "Standard cotton programme" is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

Automatic controlled drying

- You can choose different programme base on your different clothes materials. The device has the function with sensor the moisture in order to automatically adjust the drying time for optimal drying. This drying system is fit for cottons, synthetics sections and Anti-Bacterial, silk programme.

Time controlled drying

- Select the 90 or 60 minute programme for cottons or the 30 minute programme for synthetics. To stop a programme, press the switch button. Please take out the clothes after the complete drying process and then press the Power button to turn off the machine.

Programme Option buttons

- Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Hold button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

Select the Buzzer

After turning on the appliance, the buzzer will not sound unless required. The buzzer can be turned on or off during the process. By pressing "Buzzer" button, the buzzer will sound and the corresponding pilot light comes on. When the buzzer is on, the signal will sound in the following cases:

- When depressing any button.
- Open the door during operation.
- Take out the condenser during operation.
- When the water container is full.
- At the end of program after cooling phase.

When the buzzer is on, if you press the "buzzer" button once more, the buzzer will be switched off.



Buzzer

Select the Start/Hold

Press this button to start the dryer after having selected the programme and the options. If the door of the appliance is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme right away. In this case, the light of Start/Hold flashes to keep in remind you that the start button needs to be pressed again.



Start/Hold

Select the Power

- Press the Power button to turn on the machine.



Power

Indicator Lights

- ☐ Drying "Drying Light"
This light indicates the appliance is in the drying phase.
- ☐ Cooling "Cooling Light"
This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minutes cooling phase to cool the laundry.
- ☐ End "End Light"
This light is on during the anti-creasing phase after the cooling phase.
- ☐ Overflow "Overflow Light"
It comes on when the water container is full, which remind you to empty the water container.
Note! Empty the water container after each load to avoid the alarm during next use.
- ☐ Filter "Filter Light"
It comes on after each load to remind you to clean the filter. If the filter, is not cleaned. After each use, but the drying efficiency will be influenced is not cleaned.
- ☐ Child Lock "Child Lock Light"
This light indicated the appliance is locked.

"Child Lock" Functions

When the machine is on, press and hold "Start/Hold" and "Buzzer" button for several seconds, the system will lock all the buttons. Then, all buttons are invalid. If you want to make the appliance to return to the normal state, press **"Start/Hold"** and **"Buzzer"** button and button for several seconds again.

The function will be released in the following cases:

- Open the door during operation
- Take out condenser during operation
- Water tank full



You can set again the "Child Lock" function when you restart the machine.

At the end of the programme

All drying programs end with 10 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration:30 minutes maximum). If you do not remove the laundry, the machine will remain in the standby status, after the anti-creasing phase. The display shows “End” and the buzzer sounds for 15 seconds if you have selected the buzzer. Press the Power, all the signal light will close.

After each use

Clean the filter.

Important

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position “Air Dry” and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the on-off switch and then turn to “Air Dry” and press the “Start” button.

Modifying the programme

Turn off the machine to restart a programme.

Drying Hints

Use Process



Drying Hints

Before loading the laundry

Never tumble dry the following: Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment tables:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- Easy-care items, too, e.g. shirts, should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "Iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief pose-drying time, but at least 30 minutes. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

Drying Hints

Use Process

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins)

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

To avoid laundry becoming tangled:

Close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).

Turn items with double-layered fabrics inside out (e.g. with cottonlined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Maximum loads

Recommended loads are indicated in the programme charts:

General rules:

- **Cotton, linen:** recommended loads are not too tightly packed:
- **Synthetics:** drum no more than half full:
- **Delicate fabrics and woollens:** drum no more than quarter full.

Kind Notice: Try to load the maximum capacity of the machine as small loads are uneconomical. For easy-wrinkle clothes, slightly reduce the laundry.

Laundry weights

The following weights are indicative:

Bathrobe	1600g	night dress	265g
napkin	130g	ladies' briefs	130g
quilt cover	930g	men's work shirt	800g
sheet	665g	men's shirt	265g
pillow case	266g	men's pyjamas	130g
tablecloth	330g	blouse	665g
towelling towel	265g	men's underpants	130g
tea cloth	130g		

Drying programmes

Use Process

Drying programmes

Section	Course	Max load	Description of programme
Cottons	Heavy	8kg	Jeans, work clothes, Thick or multi-layered textiles and so on.
	Strong	8kg	Jeans, work clothes and so on.
	Standard cotton	8kg	Drying shirt, T-shirt, cotton trousers.
	Damp	8kg	Drying knitted items, cotton shirt.
	Iron	8kg	Drying sheet, bed linen, table linen, starched laundry.
Synthetics	Extra	4kg	For sheet, tablecloth, synthetics items.
	Cupboard	4kg	For synthetics items.
	Iron	4kg	For knitted items, shirt.
Time	30°, 60°, 90°	8kg	Drying thick or multi-layered textiles, e.g. terry towelling items. For drying individual items of laundry or for small volumes.
Specials	Anti-Bacterial	4kg	For men's underpants, pantywaist, winter clothing.
	Silk	2kg	For silk items.
	Freshen-up	4kg	For men's underpants, shirt.
	Delicate	4kg	Pressing this button allows drying to be performed at a lower temperature.
	Air Dry	8kg	For men's underpants, shirt, T-shirt, cotton trousers, etc.

Kind Notice : for drying bathrobe and toweling towel, the max load don't exceed 6kg.

Care and cleaning

Use Process

Care and cleaning

 
You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning

Use only soap and water and then dry thoroughly. Important : do not use methylated spirit, diluents or similar products.


Cleaning the door

Clean periodically the interior part of the door to remove any fluff. Accurate cleaning ensures correct drying.

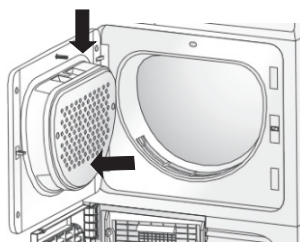

Cleaning the filter

 - You dryer will only function well if the filter is cleaned.
- The filter collects all the fluff which accumulates during drying, for your unit to operate at optimum efficiency.
- "Filter" indicator lights remind you, they must therefore be cleaned.
- The filter must be removed for cleaning.
- When drying, all the fibre clothing are unhairing, dryer through the filter collects all the fluff.
- When this phenomenon happned, please use a brush and Dipped warm water to clean filter. Open the door, remove filter. (see picture)

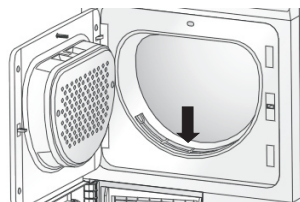


Do not use the appliance without filter.


Water receiver emptied

Water receiver collects all of the water from condenser. Water receiver need to be emptied after each use. Otherwise drying performance will be affected. If water receiver is full, 'overflow light' will be illuminated and buzzer sounds. Under this situation, water receiver must be emptied within one hour.

 1. Pull out water receiver

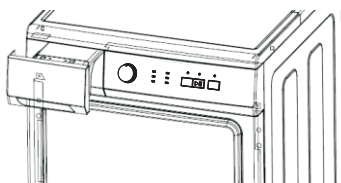

 2. Empty wasie water

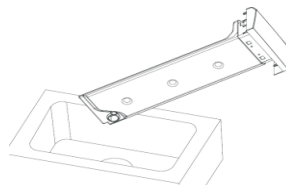


3. Push the water receiver in dryer

4. Press the Start/Hold button


Cleaning the condenser

Condenser is one of the most important parts to ensure effective drying. Therefore needs special attention. We suggest you clean the condenser three or four times every year.
(Notice : When the condensor is not in the proper position, the alarm will ring.)

 
1. Open condenser cover

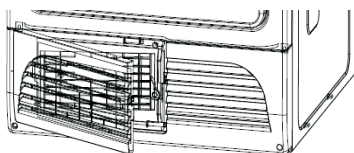

 2. Move two pieces of lock rod, pull out the condenser

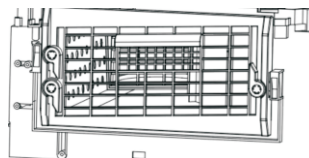


 
3. Put the condenser under the tap to make water through completely by clean condenser.

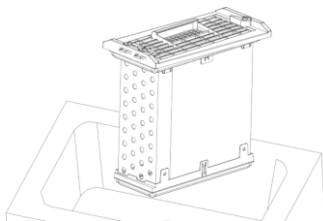

4. Install the condenser following the above steps, but in reverse order.



Humidity sensor

  In the movement process, this device is used for induction clothing humidity, it means that it must be cleaned periodically. Calcium oxide build up on the sensor surface should be cleaned off.

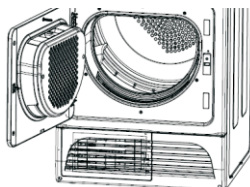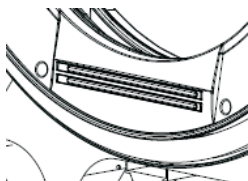


Lamp replace (options) on some models

  1. Open the door, put your hand into the drum of the dryer, use screw driver unscrew two pieces of screw, and take out the lamp cover.

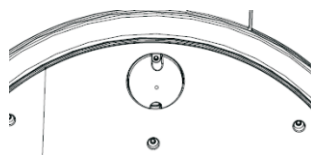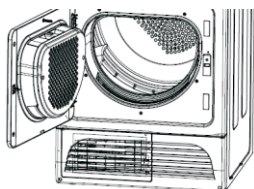

 2. Remove the lamp by turning counter clockwise. Be careful, do not let the lamp fall. Install the new lamp and lamp cover with the reverse direction.

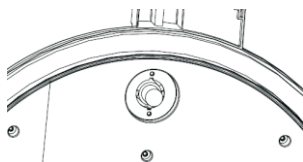

Something not working

Use Process

Something not working

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the check listed below.
- During machine operation it is possible that the Start/Hold pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the Start/Hold button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction	Possible cause	Solution
Dryer does not work	<ul style="list-style-type: none"> ● Mains plug is not plugged in. ● Loading door is open. ● Have you pressed the ▶ Button? ● Water receiver is full. 	<ul style="list-style-type: none"> ● Plug in at mains socket. ● Close loading door. ● Press the ▶ button again. ● Empty water receiver
Drying results unsatisfactory	<ul style="list-style-type: none"> ● Wrong programme selected. ● Filter clogged. ● Incorrect volume of laundry. ● Sediment on humidity sensor 	<ul style="list-style-type: none"> ● Select a different programme the next time you dry (see "Drying programmes" section). ● Clean lint filter. ● Observe recommended loading volumes. ● Clean humidity sensor surface
Drum light does not work (option on some models)	<ul style="list-style-type: none"> ● Light bulb is defective. 	<ul style="list-style-type: none"> ● Replace light bulb.
Drying cycle ends shortly after programme starts. "End" light illuminated.	<ul style="list-style-type: none"> ● Not enough washing loaded or washing loaded is too dry for selected programme. 	<ul style="list-style-type: none"> ● Select higher drying level (e.g. Heavy instead of Strong.)
Drying cycle lasts an unusually long time.	<ul style="list-style-type: none"> ● Load volume is too big. 	<ul style="list-style-type: none"> ● Reduce load volume.



If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

Call : 011 89 252577

Technical data

Appendix

IMPORTANT:

If you call out and engineer to a fault listed below, or to repair a fault caused by incorrect use of installation, a charge will be made even if the appliance is under guarantee.

Technical data

Dryer Model	DWRCB8011
Dryer Capacity (kg)	8.0
(AC V/Hz)	220-230/50
Rated power (W)	2500
Weight (kg)	40.5
Power (left-on mode) (W)	0.68
Power (off mode) (W)	0
Energy consumption at full load (kWh)	4.79
Programme time at full load (min)	157.7
Dimensions (W*D*H) (mm)	595x630x850



It is dangerous to alter the specifications or attempt to modify this product in any way.



Care must be taken to ensure that the appliance does not stand on the electrical supply cable.



Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.





IMPORTANT: The appliance must not be built-in.

- **Unpacking**

All packing must be removed before using the appliance.

- **Check accessory**

Open the accessory bag and check the accessories.

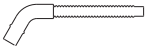Accessory	Name	Quantity
	drainpipe	1
	Manual	1



Should the appliance be moved, it must be transported vertically.

Earth note :

This appliance must be earthed. In case of failure or damage, earth can provide a minimum resistance to reduce the possibility of electric shock. The power cord has grounding wire with device and power cord with plug. Plug must be inserted into a properly installed and grounded socket (In accordance with all local rules and standards).

Procedure:

A separate earth is required by some local rules. In that case, you need to buy a grounding wire, clips and screw. This should be fitted by a suitably qualified person.

 
 
Water discharge

It's not necessary to discharge the condensed water to the tank, it can be drained out directly.

Change drainpipe

Pull out the water pipe by means of the arrow direction. Then install the drainpipe.

Use pliers as it can be difficult to do.

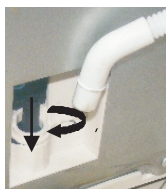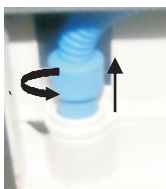


Removing transport safety packaging foam

⚠ Caution!

Before using the machine, the packaging foam must be removed from the drum.

 1. Open the loading door.
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove the two packaging foam from the machine.

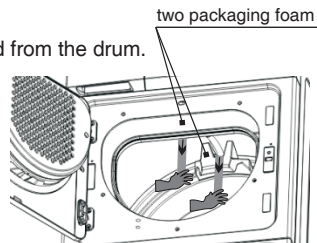

Level adjustment

1. Adjust the level to avoid vibration and noise.

Machine must be placed in a clean place, no water, ice and combustible materials there.

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

 
2. If the tumble dryer is not completely levelled, adjust the front feet. Lower the dryer by turning the feet anti-clockwise and the ascend it by turning clockwise till the appliance will not shake.

Check across the corner

When you press the edge, the machine should not shake up and down. (please check two direction) when press on the top frame (across the corner), the dryer shakes, need to re-adjust the adjustable feet.

Do not spread a carpet under the dryer or pile up the laundry near the products.

This might cause heat build-up. It can be harm to use this product.

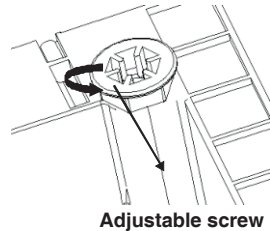

IMPORTANT:

The hot air emitted by the tumble dryer can reach temperature of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.



Door reversal

For your convenience, the door can be reversed when it comes to loading or unloading the laundry.



Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



Warning

THIS APPLIANCE MUST BE EARTHED.



This manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

- Green and Yellow-Earth
- Blue-Neutral
- Brown-Live

The wire coloured green and yellow must be connected to the terminal marked with the letter or by the earth symbol or coloured green and yellow.




Warning

- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Permanent connection
In the case of permanent connection it is necessary that you install a double pole switch.
- The switch must not break the yellow and green earth cable at any point.



Packaging materials


- The materials marked with the symbol  are recyclable.
>PE<=polyethylene
>PS<=polystyrene
>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

Old machine

Use authorized disposal sites for your old appliance. Help to keep your country tide!



- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, You will help prevent potential negative consequences for the environment and human health, Which could otherwise be caused by inappropriate waste handling of this product. For more detailed Information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



Ecological hints

To save energy and to help protect the environment, we recommend that you follow these hints:
Try to load the maximum capacity of the machine as small loads are uneconomical.

- Do not over-dry laundry, this avoids creasing and save energy.
- Select the drying programme according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well.

Daewoo Electronics Guarantee Conditions

Daewoo Electronics products are guaranteed for 12 or 24 months from the date of original purchase as follows:-

American style side by side fridge freezer	24 months*
Combination frost free fridge freezer	24 months*
Undercounter and tabletop fridges and freezers	12 months*
Washing machines	24 months*
Washer dryers	24 months*
Microwave ovens	12 months*
Commercial Microwave Oven	36 months
Vacuum cleaners	12 months
Dishwasher	12 months
Tumble Dryer	12 months

Any defect that arises due to faulty materials or workmanship will be repaired free of charge during this period.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment, cabinet parts, knobs, software faults or consumable items such as batteries, drive belts or bulbs.
- The liability of Daewoo Electronics is limited to the cost of the repair (or replacement, at Daewoo's discretion *) of the product under the guarantee. Daewoo Electronics disclaims any liability for incidental or consequential damages.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual. It must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The guarantee is in addition to and does not diminish your statutory or legal rights.

For further information regarding your guarantee please see the section at the rear of your instruction manual. In the event of a breakdown please refer to the troubleshooting guide in your instruction manual and check all plugs, fuses and electricity supply.

In the event that you need further assistance please contact Daewoo Electronics Customer Services with your model and serial number, date and place of purchase along with a brief description of the problem.




In the event of there being no breakdown or the product is not within the guarantee period you will be charged for the repair.


If you purchased an extended warranty for your product please contact the provider of the extended warranty directly.

Daewoo amends the conditions to keep update, to see the most up to date version see: <http://www.daewooelectronics.co.uk/daewoo-guarantee.aspx>

* Daewoo will not provide a replacement or provide compensation in circumstances when retailer has amended the price.

Marking explanation

V	Volt	~	Alternating current		
W	Watt	Hz	Hertz		
	Tested safety		CE marking		risk of fire

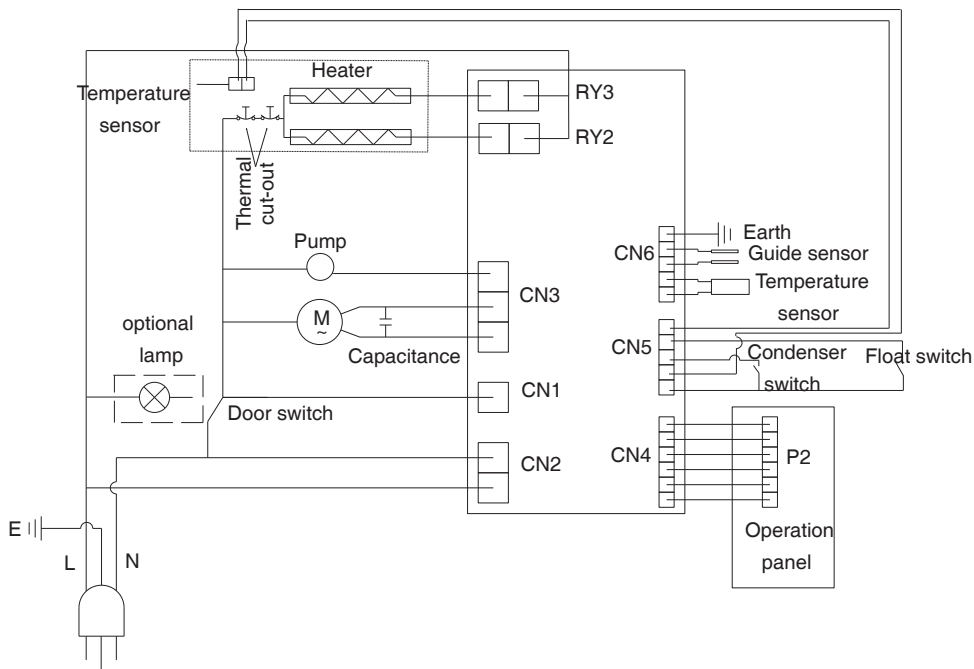 

Simply complete this form to register your FREE guarantee

In order to register your free 2 year guarantee, please complete all sections below, detach form, fold, seal and return it to the FREEPOST address. Alternatively, visit **www.registernow.co.uk/daewoo** to register or call FREE on **0808 165 2525** quoting **HGD2YR**.

Your details: (please complete in CAPITALS – don't forget your postcode).

HGD2YR

Title

Initials

Surname

House No.

Address

Town

Postcode

Home Tel No.

Mobile Tel No.

Email Address

Product type

☐

Washing Machine

☐

Refrigerator

Model e.g. FRSU20DCB (Mandatory)

Serial number (if known)

Purchase date (Required)

Store & place of purchase e.g. Dixons Manchester

Daewoo Electronics Sales UK and Home Appliance Guard Limited (including their respective group and companies) may wish to contact you about product services and offers that might be of interest to you. By submitting your details you are consenting to receiving marketing communications by post, phone, email and SMS. If you do not consent to this, please tick boxes to indicate which methods we cannot use to communicate with you. Post ☐ Phone ☐ Email ☐ SMS ☐

Marie Curie Cancer Care

We would like to forward your contact details to our charity partner, Marie Curie Cancer Care, so that they can contact you by phone or post to update you occasionally on their work and fundraising activities. If you do not want us to pass on your details for this purpose please tick here ☐

Email is a cost effective way of keeping in touch. We would like to pass your email address to our charity partner, Marie Curie Cancer Care, for the same purpose. If you are happy for us to pass your email address to Marie Curie Cancer Care, please tick here ☐

moisten here

moisten here

HGD2YR (6)

moisten here



21

1

FREEPOST RSHU-HKUG-ZBRU
HOME APPLIANCE GUARD
4TH FLOOR KINGSLAND HOUSE
21 HINTON ROAD
BOURNEMOUTH - DORSET
BH1 2DE

www.daewooelectronics.co.uk